


JUMPER	
OPEN	CLOSED
Disable Internal Oscillator and blink LED at 3Hz	Enable Internal Oscillator and blink LED at 1Hz

Original plans: Mr Herbert Dingfelder
http://www.di5neg.de/rcen_blower/rcen_blower.html


 Mods 1 by Serasidis Vasilis
<http://www.serasidis.gr/>

 Mods 2 by Kyriakos Kontakos


Kyriakos Kontakos (kkontak@hotmail.com)		
Title RC Enable Fuse Programmer for AT90S1200		
Size A	Document Number <Doc>	Rev 1
Date:	Saturday, March 22, 2003	Sheet 1 of 1

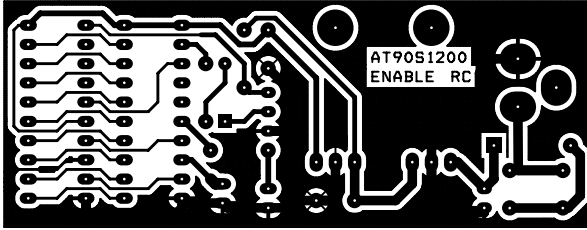

reflected

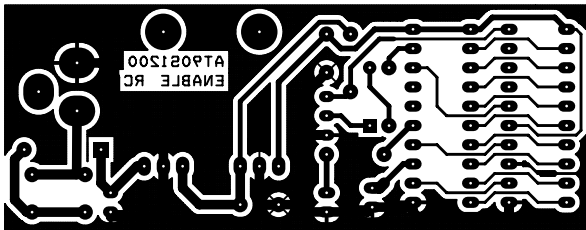

not reflected

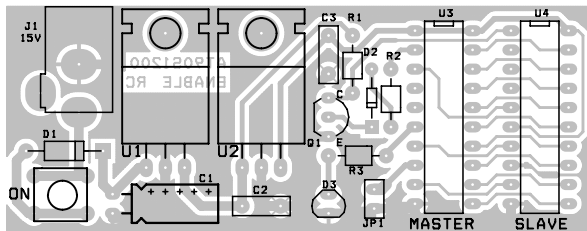

PCB and silkscreen